



Completely read all the instructions before installation  
Improper installation will void warranty!

**Step 1**

**Tools needed:**  
10mm Socket  
Trim Pin Remover

**Step 2**

Locate the two trim pins on the lower headlight trim panel and remove the two pins

**Step 3**

Remove the lower headlight trim panel

**Step 4**

Remove the 10mm screw located at the bottom of the headlight housing

**Step 5**

Remove the two 10mm screws located at the top of the headlight housing

**Step 6**

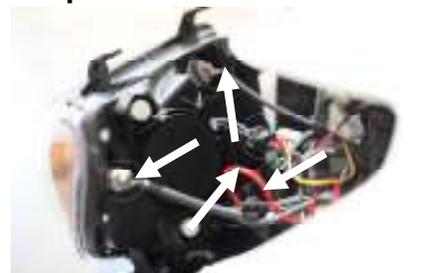
Remove the headlight by unplugging the power source and each of the three light bulb harnesses

**Step 7**

Remove the headlights

**Step 8**

Remove the Anzo headlights out of its box

**Step 9**

Connect the power source and each of the three light bulb harnesses into the Anzo headlights

## Step 10



Install the Anzo Headlights by reversing the steps 2 to 5

## Step 11



Test all functions before operating the vehicle

*AnzoUSA™ products are covered, by a limited one (1) year warranty, to be free of manufacturer's defects. However, certain AnzoUSA™ product categories have warranty policies which differ from this standard, please contact your representative for detailed category information. Damage due to improper installation or road hazards is not covered. Seller and manufacturers' only obligations shall be to replace the product proven to be defective. Neither seller nor manufacturer shall be liable for any injury, loss or damage, direct or consequential, arising out of the use of or the inability to use the product. Before using, user shall determine the suitability of the product for its intended use, and user assumes all risk and liability whatsoever in connection therewith.*

© 2008 AnzoUSA™. All rights reserved.

