


"DON'T GET LEFT IN THE DARK"

STEP 1

LOCATE PROVIDED PARKING LIGHT HARNESS.

A: LED DRIVER HARNESS

B: PARKING LIGHT BATTERY HARNESS

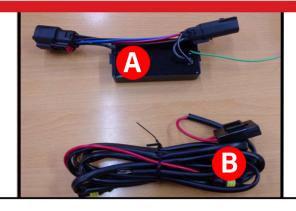




STEP 2

CONNECT LED DRIVER HARNESS (A) TO MAIN CONNECTOR ON NEW HEADLIGHT.

REPEAT STEP ON OTHER SIDE.

STEP 3

CONNECT B CONNECTOR TO A AS SHOWN.

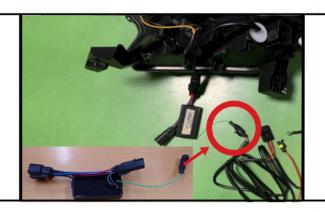



STEP 4

PLUG IN THE REMAINING HEADLIGHT CONNECTOR OF A TO OE CONNECTOR ON VEHICLE AS SHOWN.

STEP 5

CONNECT THE FORK
SPADE CONNECTOR OF
B TO POSITIVE (+)
BATTERY TERMINAL.



STEP 6

TEST ALL FUNCTIONS BEFORE DRIVING.

