



Thank you for your purchase of the EGR Ford Bronco VSL LED lights. Please read these few steps carefully as they are important for the life and warranty of the product.


1.) Remove the factory 10mm bolts from the stock trail site brackets. (shown in the image below).



2.) Remove the factory trail site brackets and wipe the mounting area clean.

3.) Install the EGR VSL light and re-use the factory bolt on the rear mounting location. Use the supplied 10mm bolts and install them in the middle and front mounting positions.

3.) Once the light installation is complete and all hardware is tightened. Please refer to the diagram below for wiring instructions.

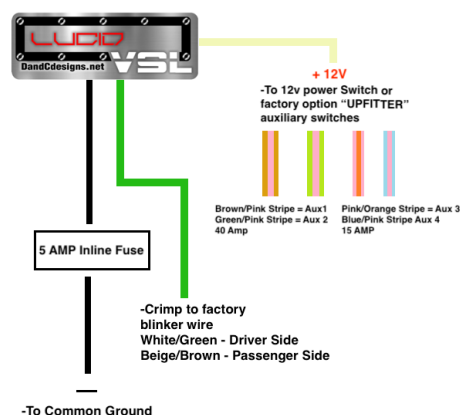

#### ADDITIONAL INSTRUCTIONS

**-BLINKER WIRE / Green**  
Depending on what side of the factory wire connector you locate, wires may vary in color from White/Green, or Beige/Brown. We recommend testing each wire with your respective side turn signal ON before you cut and connect your wires.

**-OFF-ROAD LIGHT / White**  
Our wiring instructions show the option for the factory Jeep "UPFITTERS" auxiliary switch option. If your Jeep does not have this option you will need to connect to an aftermarket 12v switch.

**-GROUND WIRE / Black**  
As instructed, we recommend you run a 5 Amp inline fuse on the ground wire. This will prevent any damage to the light and protect both amber and white LEDs as a complete circuit.

Ford Bronco Installation Video

